

SCHEDULE 2 UNIQUE CONDITIONS

5K Miles (4 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

10K Miles (8 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

15K Miles (12 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Disc brakes
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

20K Miles (16 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

25K Miles (20 months)

Replace cabin air filter
 - Every 25,000 miles or 2 years
 Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 (Continued)

Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

30K Miles (24 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Tighten bolts and nuts on chassis and body
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Fuel lines and hoses²
 Function of all lights
 Brake lines, hoses and connections
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Disc brakes
 Tire inflation pressure and tire wear
 Steering operation and linkages
 Power steering fluid level
 Front and rear suspension, ball joints and wheel bearing axial play
 Driveshaft dust boots
 Washer fluid level
 Cooling system (2008 and 2009)

35K Miles (28 months)

Replace air filter
 Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Drive belts
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

40K Miles (32 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

45K Miles (36 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 (Continued)

Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Disc brakes
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level
 Exhaust system and heat shields
 - Every 45,000 miles or 5 years

50K Miles (40 months)

Replace cabin air filter
 - Every 25,000 miles or 2 years
 Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

55K Miles (44 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

60K Miles (48 months)

Replace engine oil
 Replace engine oil filter
 Replace engine coolant (except FL22 type)*
 Rotate tires
 Tighten bolts and nuts on chassis and body
 Lubricate all locks and hinges
 Inspect:

Engine coolant level
 Fuel lines and hoses²
 Hoses and tubes for emission²
 Function of all lights
 Brake lines, hoses and connections
 Brake fluid level
 Clutch fluid level (2008 and 2009)
 Disc brakes
 Tire inflation pressure and tire wear
 Steering operation and linkages
 Power steering fluid level
 Front and rear suspension, ball joints and wheel bearing axial play
 Driveshaft dust boots
 Washer fluid level
 Cooling system (2008 and 2009)

Additional Operations & Exceptions

Spark Plugs

- For 2.0L, 2.3L, 2.5L engines:
 Replace every 75,000 miles.
 - For 2.3L engine with Turbocharger:
 Replace every 60,000 miles.

Engine Valve Clearance

Audible inspect every 75,000 miles, if noisy, adjust.

Engine Coolant

FL22 type*¹ - Replace at first 120,000 miles or 10 years; after that, every 60,000 miles or 5 years.

*Except FL22 type - Replace at first 60,000 miles or 4 years; after that, every 2 years.

*¹: Use FL22 type coolant in vehicles with the inscription "FL22" on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.

*²: For emissions footnote see owner's manual.